

TRUCK LIGHT MC2 LAND ROVER (110) - ALL TYPES
FITTING OF TRANSFER CASE CAUTION DECAL

MODIFICATION INSTRUCTION

Issue of this instruction is authorised by CONMEA

Introduction

1. This instruction details the fitting of a caution decal to the inside of the windscreen. The decal details the procedure which must be followed when selecting high or low range in the transfer case.

Note:

1. NSN and Designation used in this instruction were current at the date of issue. If twelve months or more have expired since issue, the NSN should be checked for supersession.

General

2. Estimated Modification Time. 0.15 hrs.
3. Priority. Group 2.
4. Modification to be Applied to. All subject vehicles.
5. Items Affected. Windscreen.
6. Action Required. By RAEME units authorised to carry out unit, field and base repairs.

TABLE 1 - STORES REQUIRED (To be demanded through normal supply channels)

Item	NSN	Designation	Qty per Equip
(a)	(b)	(c)	(d)
1.	9905-66-128-5888	Plate, Instruction	1

Note:

1. Initial distribution of caution decals will be forwarded direct to units by MEA.

Detail

7. The modification is to be carried out as described below.
8. Fitting. The decal is to be fitted to the inside of the windscreen in the position shown in Fig 1.
9. Modification Record Plate. Deface the numeral 2 on the modification record plate.
10. Documentation. Details of the modification are to be entered in the TGM 120 Record Book for Service Equipment of all the subject vehicles.

UNCONTROLLED WHEN PRINTED

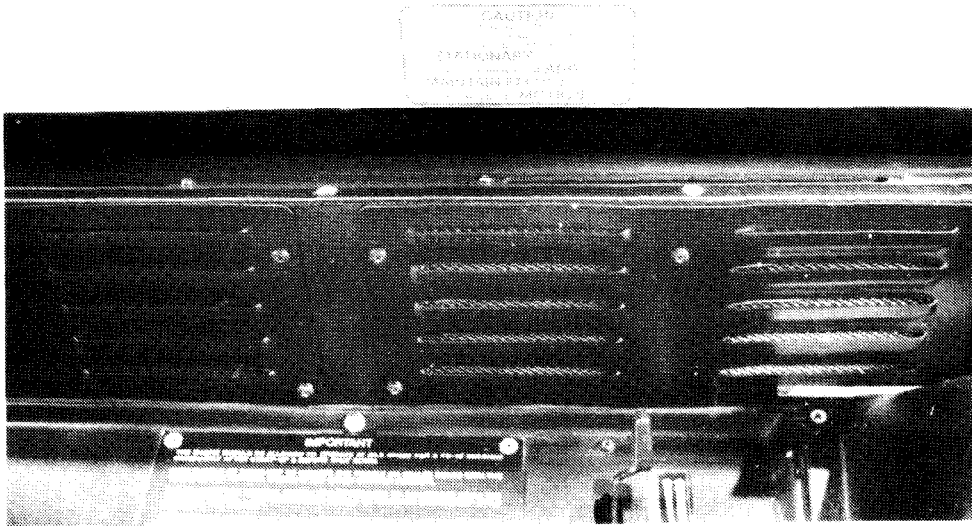


FIG 1 - POSITION OF CAUTION DECAL

E N D